



How to read your Bglobal Smart Meter

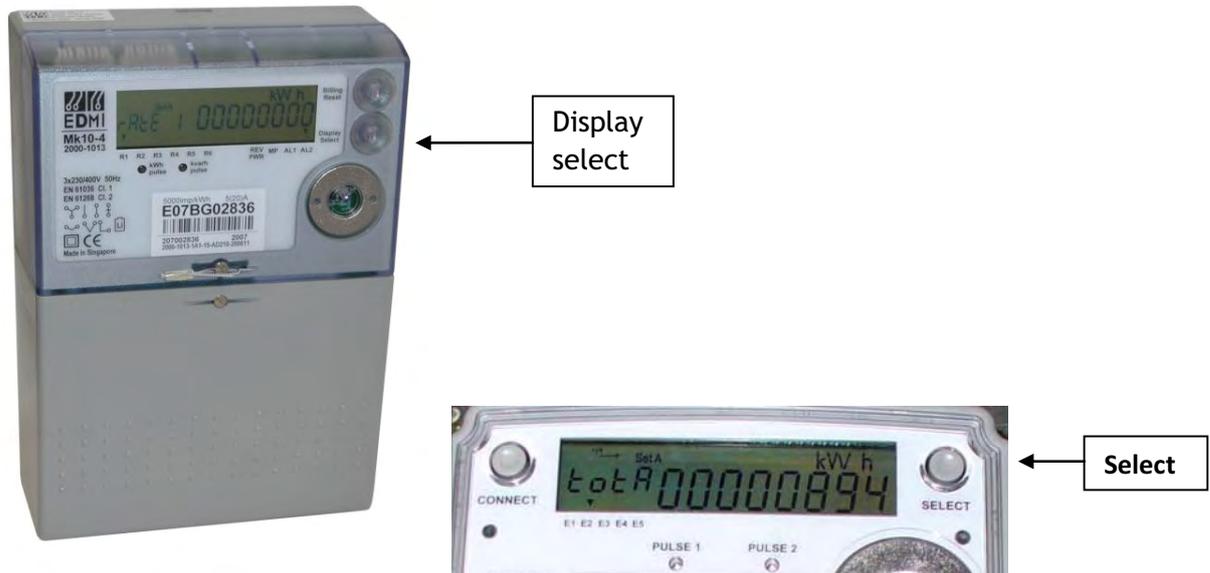

On the front of the meter there is a button called either SELECT or DISPLAY SELECT. When you press this button the screen should show the TIME. Further presses of the button will advance to other screens such as DATE and LAG. Pressing and **holding** the button for approximately 2 seconds toggles the screen between Set A and Set B. You should make sure that you are in Set A.

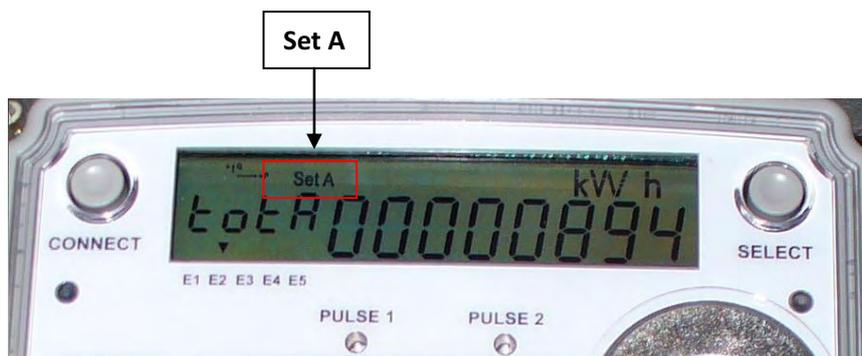

The number of readings that you need to record will differ depending on whether you have a single rate, 2 rate or 6 rate meter. You can find this out by looking at one of your previous bills (your new meter is likely to have the same number of rates as your old meter). If on your bill you see 'All units' to the left of your readings you are likely to have a single rate meter. If you see 'Day units' and 'Night units' you are likely to have a 2 rate meter. If on your bill you see six sets of readings you are likely to have a 6 rate meter.

If you have a single rate meter

If you have a single rate meter then simply press the Display Select button until you see the Total reading – this is the only reading that you need to record.



If you have a 2 rate meter

Press the Display Select button 4 times. You should come to the Rate 1 reading. Press the Display Select button again and you should see the Rate 2 reading. Record both of these readings.



When you are on the last Rate, press the Display Select button a further 4 times and you should see the Total reading.

(As you press the button you will see different screens such as DATE, LAG and APP EnG – these screens can be ignored. You only need to record the Rate 1 and Rate 2 readings).

If you have a 6 rate meter

Follow the instructions for a 2 rate meter, but you will need to press the button a further 4 times to record Rate 3, Rate 4, Rate 5 and Rate 6.